


IsoBar™ Control Module Quick Guide

The pump is pre-set to ISOBAR operation from the factory. The setting is 50 % of the maximum pump head at zero flow.

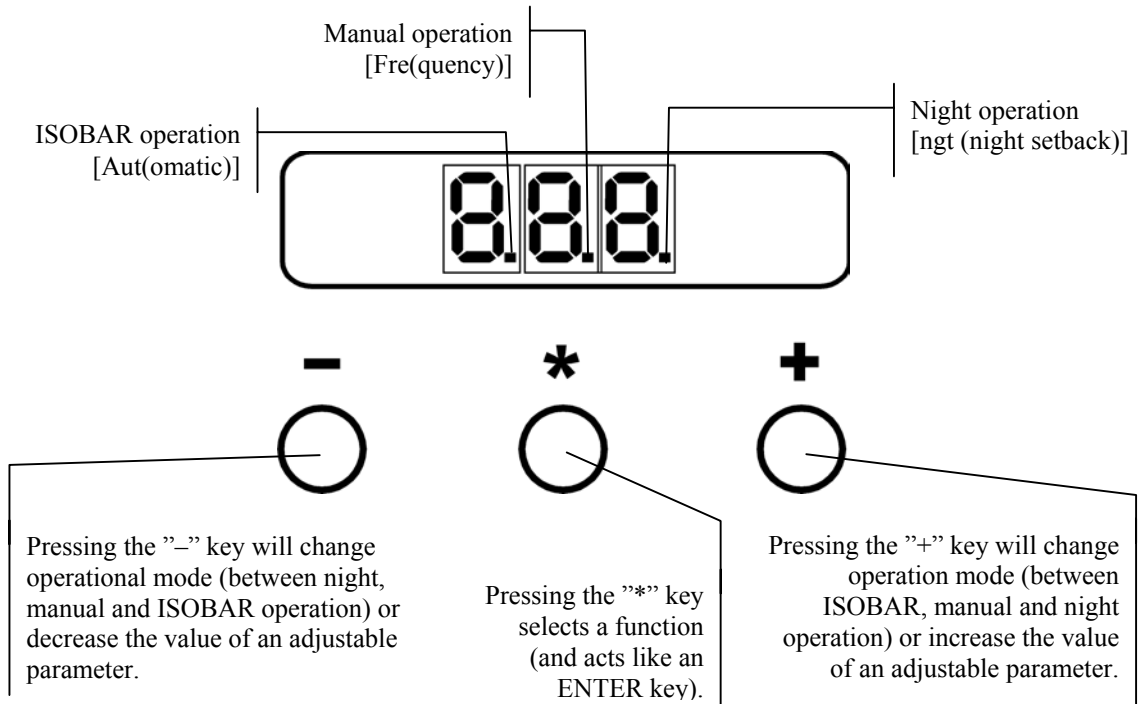

ISOBAR OPERATION

Press the "*" key until the point symbol stops flashing. The point symbol should be situated in the left display section.

A.U.T

Press the "*" key to initiate adjustment of the pressure (the point symbol starts flashing and the existing setting is displayed), then press the "+" or "-" key to increase or decrease the pressure (0 - 100 %).

.50

.50 = 50 % pressure

Press the "*" key to accept the setting.

MANUAL OPERATION

Press the "*" key until the point symbol stops flashing. The point symbol should be situated in the display section in the middle.

F.F.E

Press the "*" key to initiate adjustment of the frequency (the point symbol starts flashing and the existing setting is displayed), then press the "+" or "-" key to increase or decrease the frequency (0 - 50 Hz).

5.0

5.0 = 50 Hz

Press the "*" key to accept the setting.

NIGHT OPERATION: Please refer to the operating instructions.